


應用與特點

- ◎ 傳遞箱有各種不同的型式及尺寸，使得物料或部品，從無塵室傳進或傳出時，不會污染潔淨度控制的環境區域
- ◎ 可避免無謂的人員進出頻率次數，以確保無塵室或嚴格要求無塵潔淨區域的高度清淨度
- ◎ 備有機械式或電子式的門鎖連動機構，可避免在兩門同時打開，或卡住成開門狀態時，另一個門又被打開，而造成的交差污染的情況發生
- ◎ 可視需要選配 HEPA 或 ULPA 過濾器，設計為層流型及浴塵型


Applications and Features

- ◎ A wide variety of sizes are available for pass box and they make it possible for passing materials & parts in or out of a clear room without contaminating the controlled environment.
- ◎ To maintain the clean room or critical area at highly cleanliness level by eliminating unnecessary personnel pass in and out.
- ◎ A mechanical or electrical door interlocking system prevents cross-contamination by making it impossible to open both of front & rear doors at the same time. Or, trying to open a door as long as the opposed facing door either is open or ajar.
- ◎ An optional HEPA or ULPA filter is available to meet your needs for designing either a laminar air flow type or air shower type pass box.

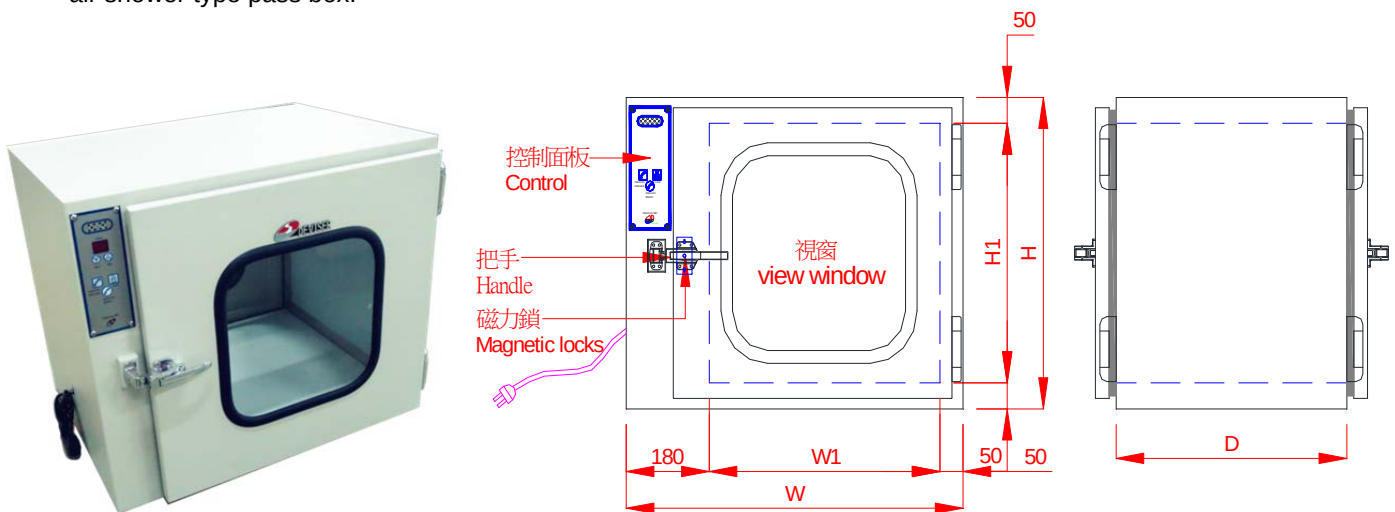

項目 Item		DPB555	DPB666	DPB777
外部尺寸 Outside Dimension (mm)	W	730	830	930
	D	500	600	700
	H	600	700	800
內部尺寸 Useful Dimension (mm)	W1	500	600	700
	D1	500	600	700
	H1	500	600	700
本體結構 Body Construction		1.6t 粉體烤漆鋼板或 1.2t SUS 不銹鋼板，搭配 SUS#304 兩側牆板及地板台面 1.6t Powder Coating Steel, or 1.2t SUS Stainless Steel, SUS#304 wall panels and floor panel are optional.		
配件 Accessories		視窗採 5mm 玻璃、蜂鳴器、指示燈、對講機 5t transparent view window glass Alarm、Indicators、Intercom		
電源供應 Power Supply		AC 1Ø □ 110V □ 220V, 50/60Hz		

※ 特殊尺寸及規格可依客戶需求製作 Customized size and specification are available to meet customer's requirements

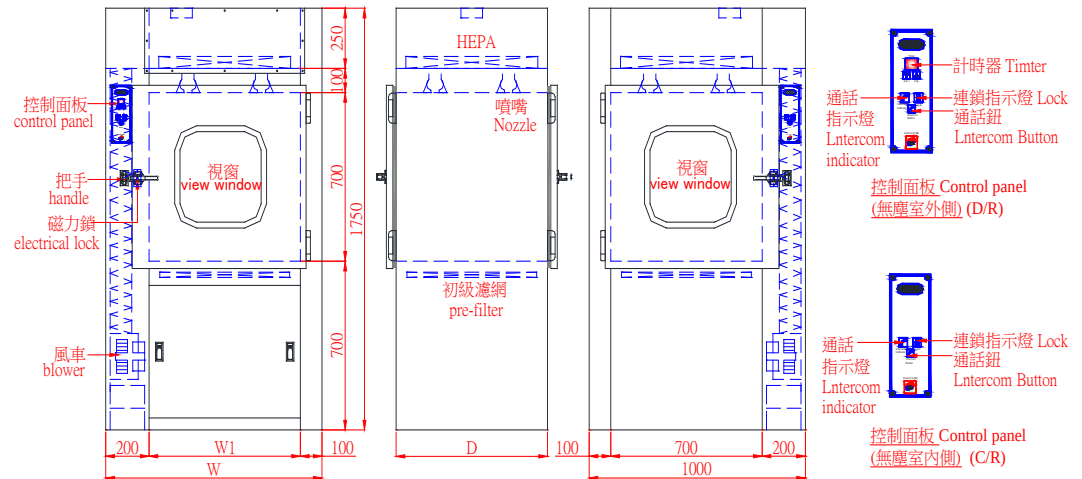

項目 Item		浴塵型 Shower type			層流型 Laminar Air Flow Type		
		DPB555S	DPB666S	DPB777S	DPB555L	DPB666L	DPB777L
外部尺寸 Outside Dimension (mm)	W	800	900	1000	800	850	950
	D	500	600	700	500	600	700
	H	1550	1650	1750	1000	1000	1100
內部尺寸 Useful Dimension (mm)	W1	500	600	700	500	600	700
	D1	500	600	700	500	600	700
	H1	500	600	700	500	600	700
本體結構 Body Construction		1.6t 粉體烤漆鋼板或 1.2t SUS 不銹鋼板，搭配 SUS#304 兩側牆板及地板台面 1.6t Powder Coating Steel, or 1.2t SUS Stainless Steel, SUS#304 enclosure and floor panel					
HEPA (mm)	特性 Features	鋁框，捕集效率 99.99%，0.3 μm Aluminum Frame, Filtration Efficiency 99.99%, 0.3 μm					
	尺寸 Dimension	470×470	570×570	610×610	435×435	535×535	535×535
初級濾網 Pre- Filter (mm)	特性 Features	鋁框，不織布，22t Aluminum Frame, Non- Woven Fabric, 22t					
	尺寸 Dimension	395×395	495×495	595×595	400×180	500×180	600×180
噴嘴 Nozzle	特性 Features	SUS 不銹鋼製品，可調整式 SUS Stainless Steel, Adjustable			—		
	數量 Quantity	4	4	4	—		
風速 Air Velocity		> 20m/s			0.45 m/s		
配件 Accessories		視窗採 5mm 玻璃、蜂鳴器、指示燈、對講機 5t transparent view window glass Alarm、Indicators、Intercom					
消耗電力 Power Consumption		0.9 KW			0.1 KW		
電源供應 Power Supply		AC 3Ø □220V □380V, 50/60Hz			AC 1Ø □110V □220V, 50/60Hz		



▲ 層流型

Laminar Air Flow Type



▲ 風刀式靜電除塵型 Air knife

Static Elimination Type



▲ 隧道式輸送除塵型 Tunnel

conveyor air shower type



▲ 雙層傳遞型

Two Layers pass boxes type

※ 特殊尺寸及規格可依客戶需求製作 Customized size and specification are available to meet customer's requirements