



Applications and Features

- Damper continuously bleeds off excessive internal air pressure to maintain a safe positive air pressure.
- It automatically discharges any sudden surge of incoming gas and protecting against accidental negative pressure by functioning as a check valve. As a result, it can ensure that neither polluted air nor contaminants will enter the clean area in the event of a momentary negative pressure.
- The Damper allows for a simple way of room side adjustment of the clean room positive air pressure.

▼ D600

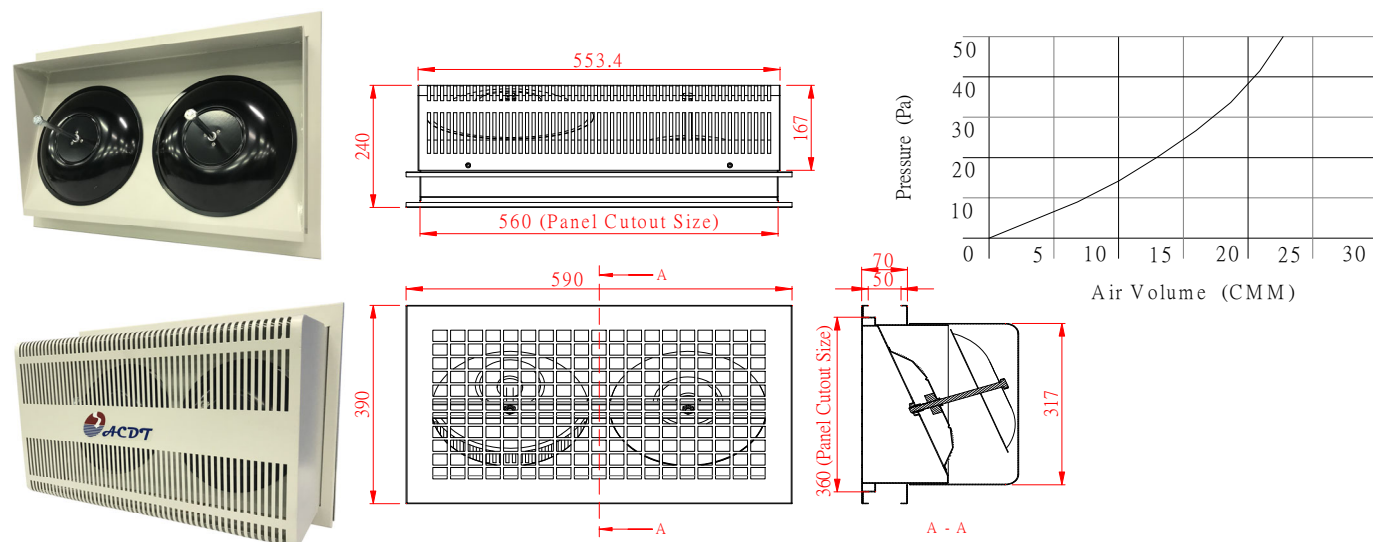

D300

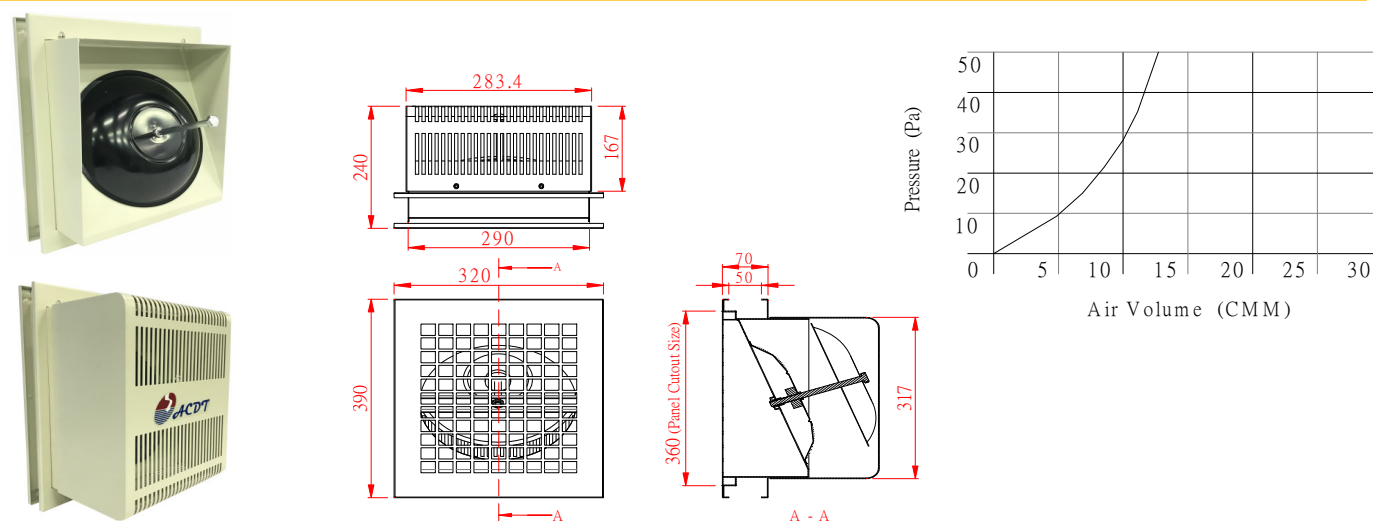

Item		D300	D600
Outside Dimension	W	320	590
	H	390	390
Body Construction		Powder coating cold-roll steel sheets	
Shield grille		Powder coating cold-roll steel sheets	
Windshield		Aluminum plate	
Pressure adjusting range (Pa)		5 ~ 50	5 ~ 50
Air flow rate (CMM)		2.5 ~ 13	5 ~ 23
Opening hole dimension		W290×H360	W560×H360

※Customized size and specification are available to meet customer's requirements