



Clean Hand Washer, Sterilizer & Dryer

Clean Room Equipment

Hand Washer provides the most effective way of decontaminating the pollutants on the hands of the workers entering the critical clean areas.

Utilizing touchless reflective infrared sensor, Hand Washer leads workers through complete hand sanitation process, including sanitizer dispensation, tempered water, and instantly heated warm air drying.

The unique hand wash timer and wash timing light monitor the duration of hand washing by using the prominently displaying instructions for workers to follow.



AIR CLEAN DEVISER TAIWAN CORP.

Wufong District, Taichung City, Taiwan


+886-4-23310802

intl.sales@acdt.com.tw

www.acdt.com.tw



Operation Instructions

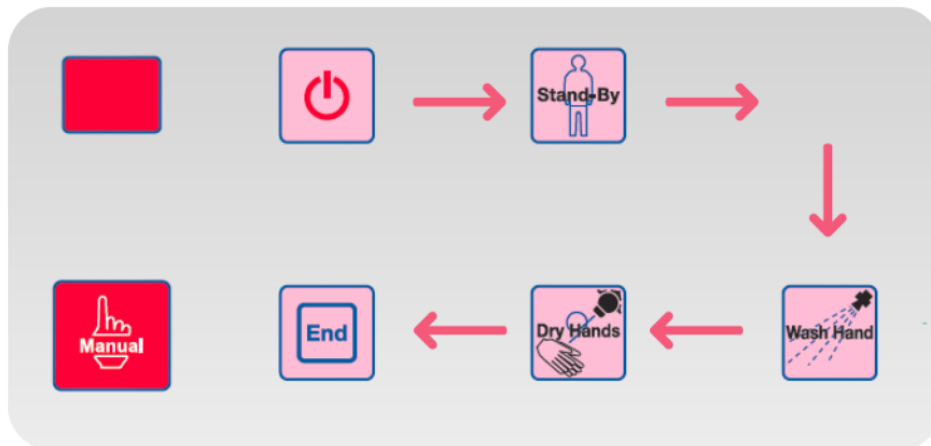


The power indicator light is on, indicating that the device is in standby mode.

Automatic handwashing.

- Place both hands into the sink.
- The hand washer dispenses water automatically, and the indicator light is on.
- Water automatically stops dispensing after the set time.

Process complete

- Hand washer has completed all steps.
- End indicator light is on.

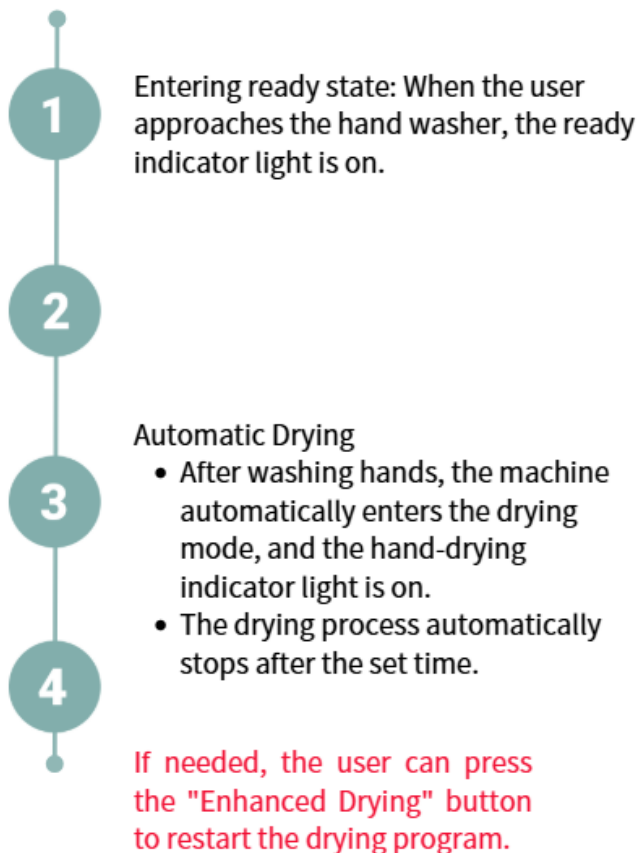

Clean Hand Washer, Sterilizer & Dryer



Specifications

| | |
|-------------------|--|
| Outside Dimension | W580*D530*H1770mm |
| Body Construction | SUS 304 |
| HEPA | 300*250*50mm, filtration efficiency 99.99% 0.3μm |
| Pre-Filter | 300*250*22mm-1 piece 35% |
| Blower | 600W*2 pcs |
| Features | Drying time is adjustable (1~99 seconds) |
| Air Velocity | >70m/s |
| Power Supply | AC 1Ø □ 110V □ 220V/ 60Hz |
| Power Consumption | 1.0kW |

